





- ES: Escanea este código QR para ver las instrucciones actualizadas y posibles vídeos tutoriales.
EN: Scan QR code for updated manual and possible tutorial videos.
FR: Scannez ce code QR pour voir les instructions mises à jour et les vidéos possible.
IT: Scannerizzate il codice QR per vedere le istruzioni aggiornate ed eventuali tutorial video.
PT: Faça o scan deste código QR para obter instruções actualizadas e possíveis vídeos.
NL: Scan de QR code voor de actuele montagehandleiding en eventuele video met uitleg.
DE: Scannen Sie den QR-Code für die aktuelle Montageanleitung und eventuelle Video-Tutorials.

APSD061

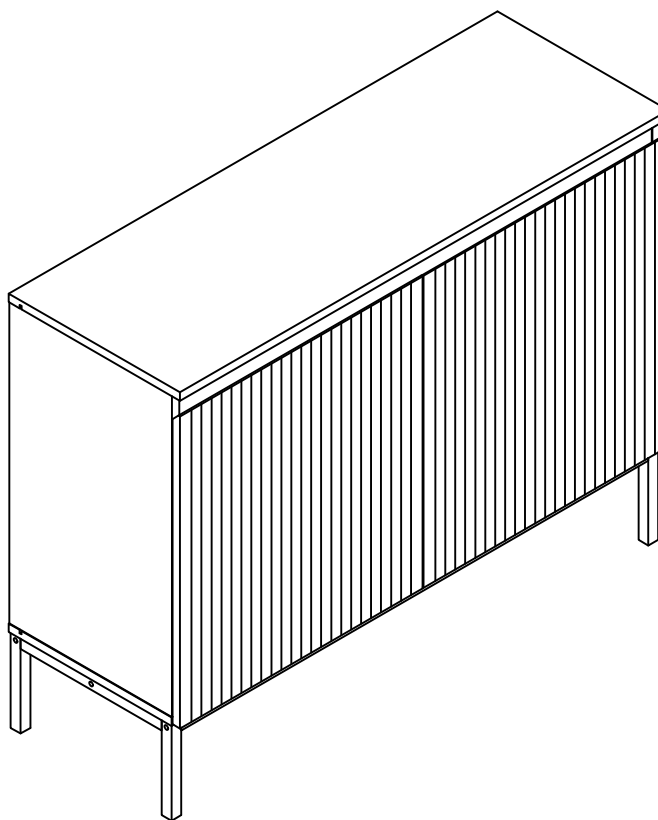

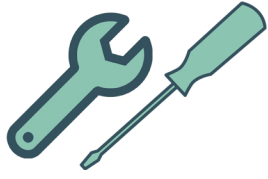

EN. Install the Wall Anchor Mounting Point It's mandatory to anchor it to the wall (either at the top or bottom of the furniture).

ES. Dispositivo antivuelco. Es obligatorio anclarlo a la pared (en la parte superior o inferior del mueble).


FR. Il doit être fixé au mur (en haut ou en bas du meuble).






IT. Dispositivo antiribaltamento. È obbligatorio fissarlo alla parete (nella parte superiore o inferiore del mobile).















PT. Dispositivo antitombamento .É obrigatório fixá-lo à parede (na parte superior ou inferior do móvel).

NL. Het is verplicht om het aan de muur te verankeren (aan de boven- of onderkant van het meubel).






DE. Es ist obligatorisch, es an der Wand zu verankern (am oberen oder unteren Teil des Möbel).

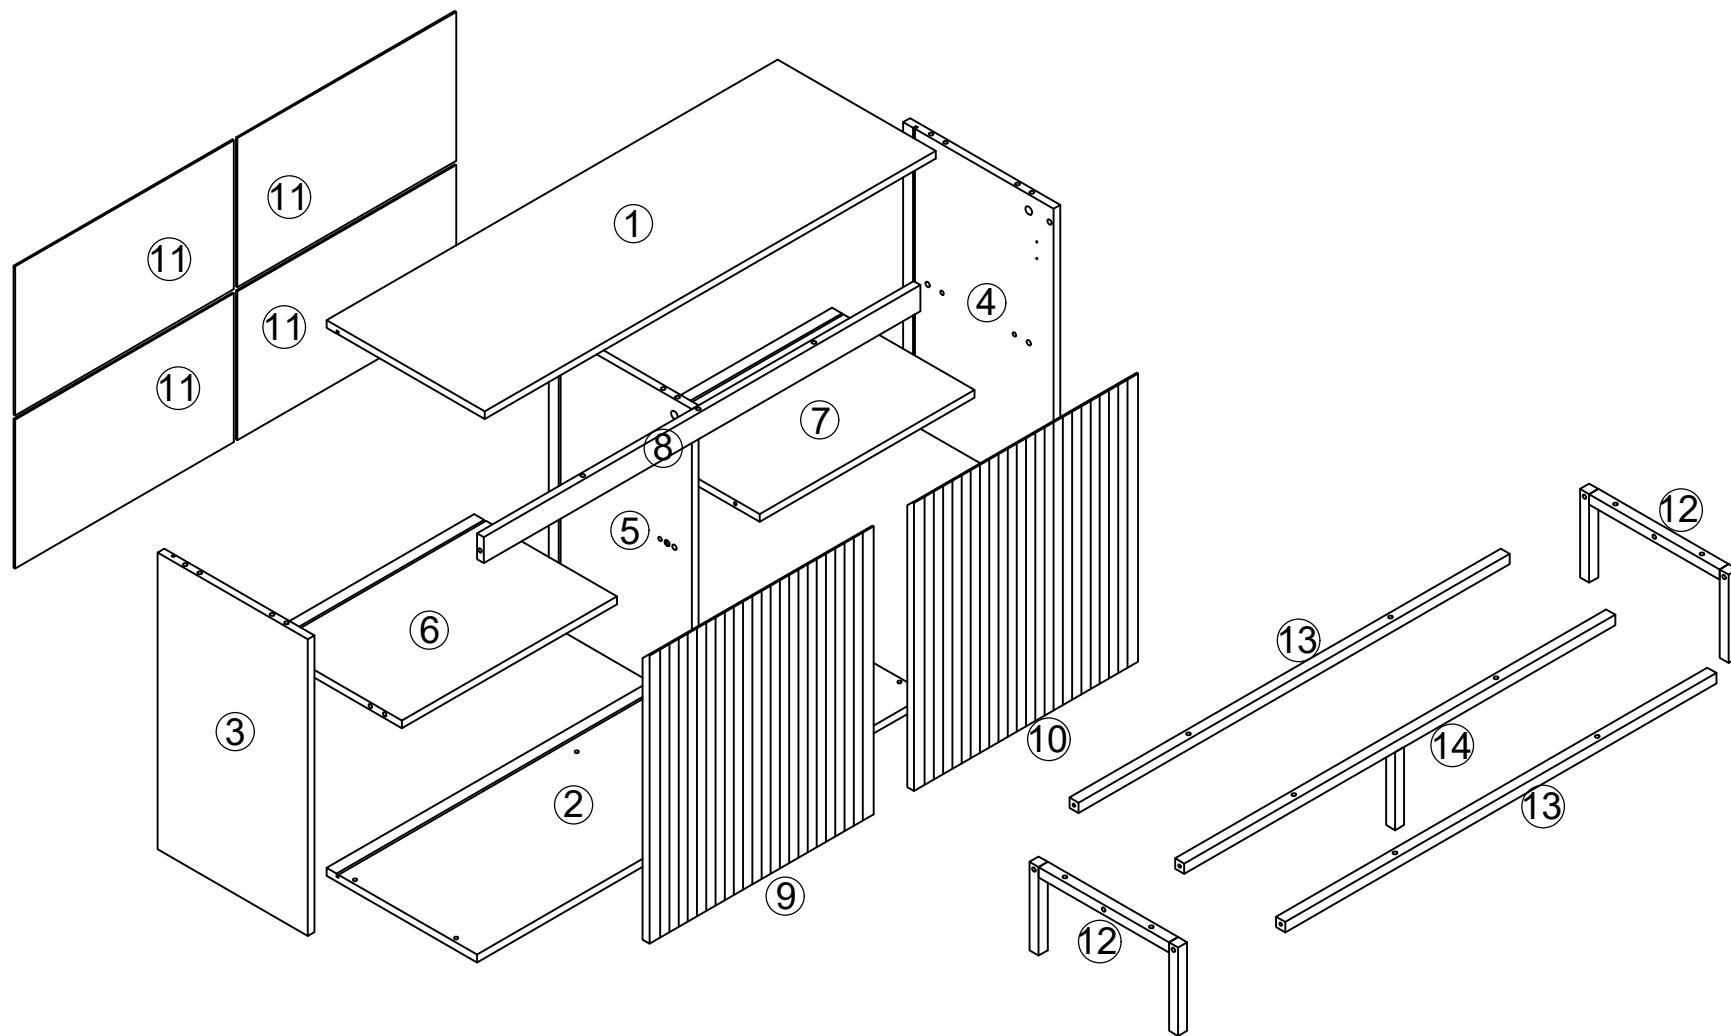

A  16PCS	B 8*40  13PCS	C 7*50  8PCS	D 3.5*12  24PCS	E 6*30  10PCS	F  4PCS	G  16PCS	H 3*12  16PCS	I  2PCS	J 6*40  6PCS
--	---	--	---	--	--	---	---	--	--

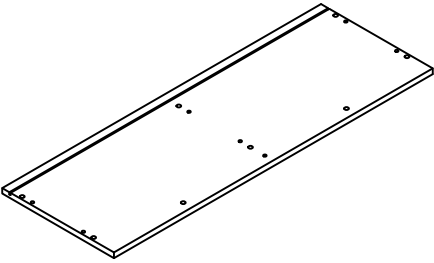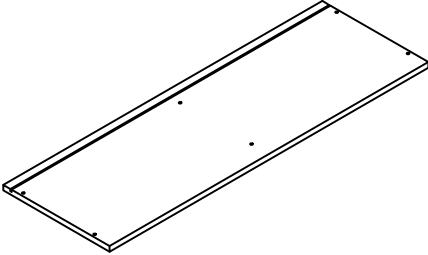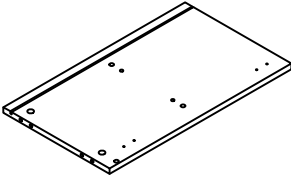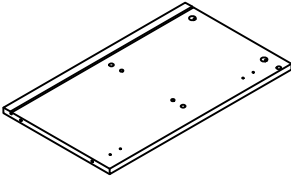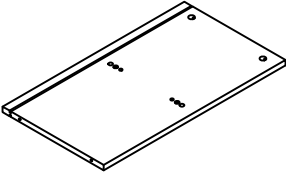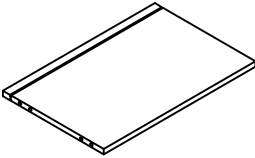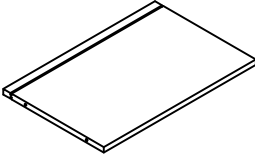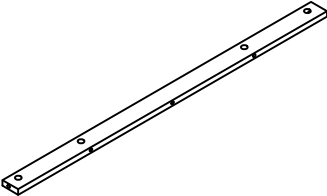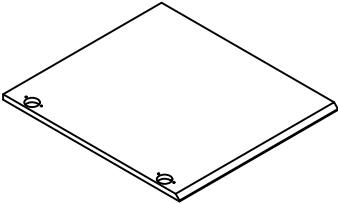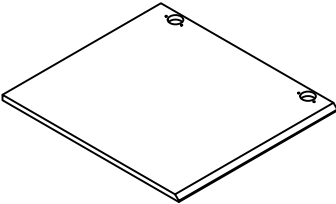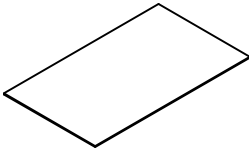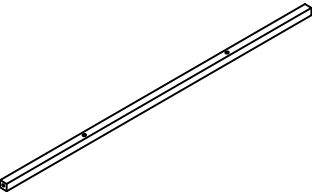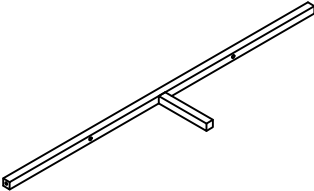
1  1000*350 1PS	2  1000*333 1PS	3  570*333 1PS	4  570*333 1PS
5  570*317 1PS	6  476.5*316 1PS	7  476.5*316 1PS	8  968*50 1PS
9  553*497 1PS	10  553*497 1PS	11  286*485 4PS	12  329*170 2PS
13  956*20 2PS	14  956*170 1PS		

1

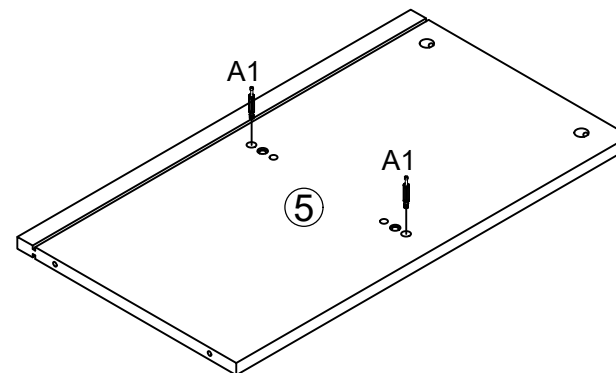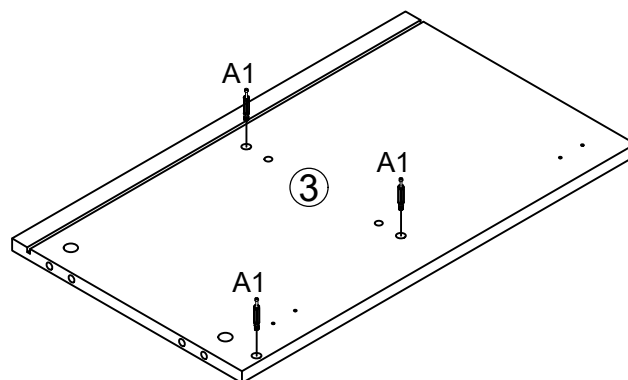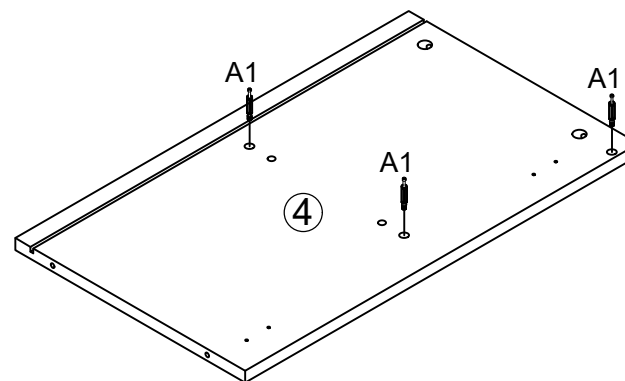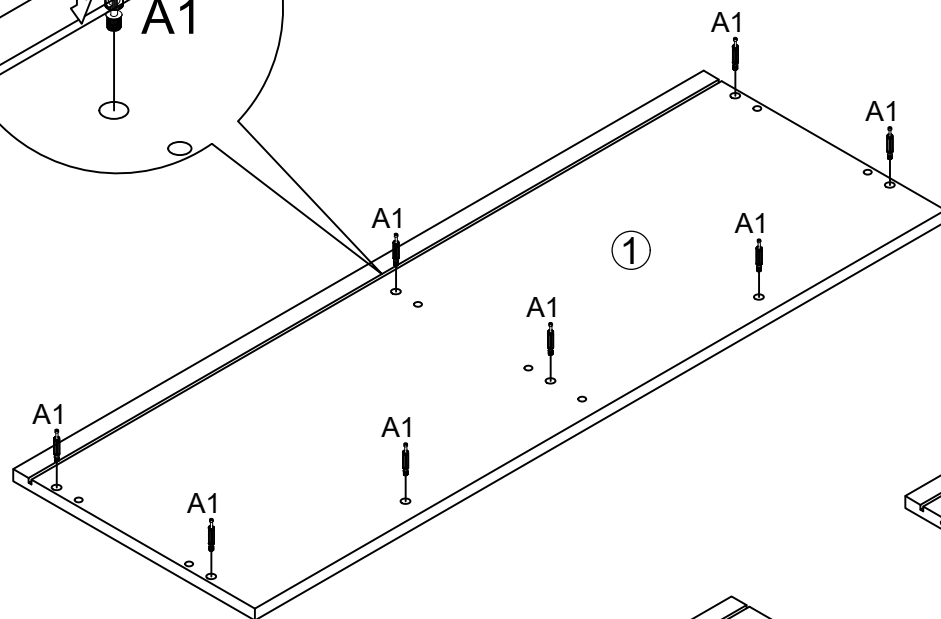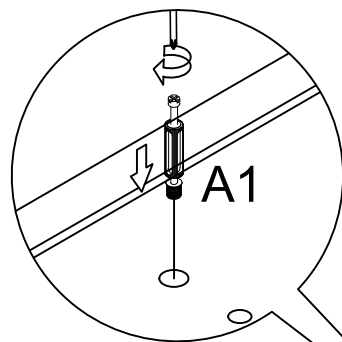

A1*16

2

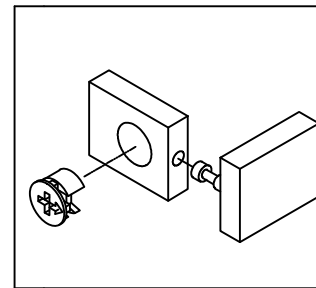

(EN)

Make sure that the arrow on the minifix body (A2) is faced to the hole of the board which will be assembled.

(ES)

Asegúrese de que la flecha de la excéntrica (pieza A2) tiene que estar orientada a la perforación del tablero al cual se va a unir.

(NL)

Let op: De pijl op de excentrische meubelverbinder (onderdeel A2) moet gericht zijn naar de boring van het paneel waarop hij moet worden bevestigd.

(DE)

Hinweis: Der Pfeil auf dem exzentrischen Möbelverbinder (A2) muss auf die Bohrung der Platte zeigen, an der er befestigt werden soll.

(PT)



Tenha certeza de que a seta do excêntrico (peça A2) deve estar orientada para a perfuração da tábua à qual vai unir-se.

(FR)

Assurez-vous que la flèche de l'excentrique (pièce A2) doit être orientée vers la perforation de la planche à laquelle elle va être jointe.

(IT)

Assicurarsi che la freccia dell'eccentrico (pezzo A2) sia orientata alla perforazione del pannello a cui andrà ad unirsi.

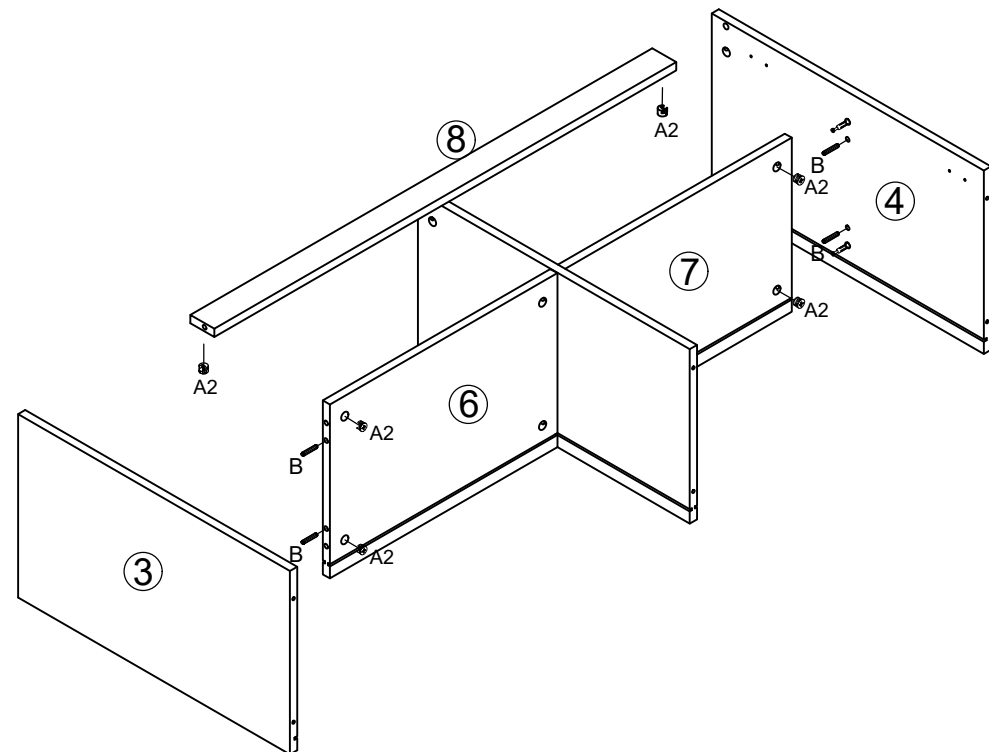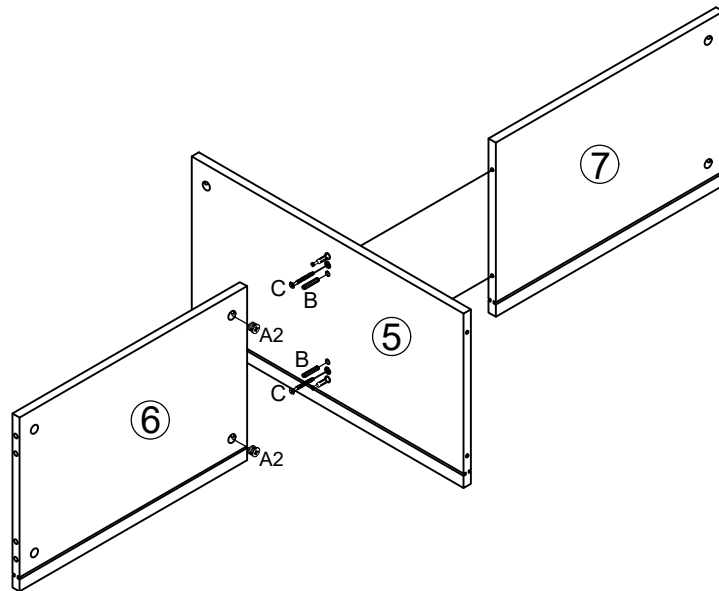

A2*8





B*6





C*2

3

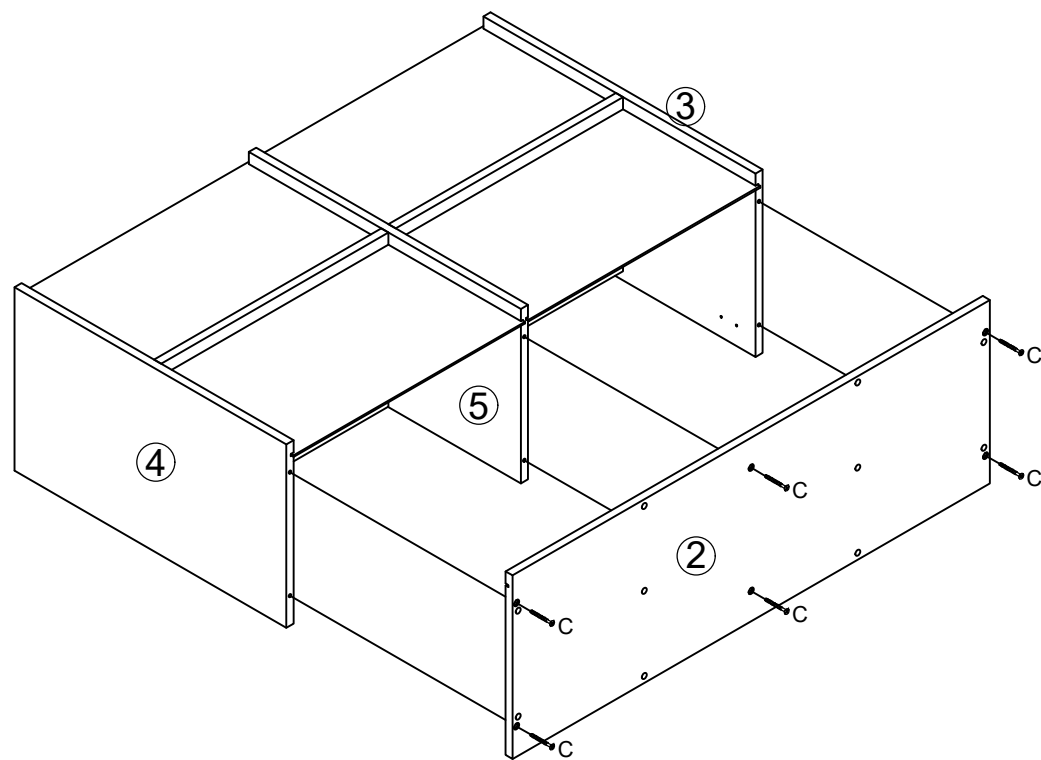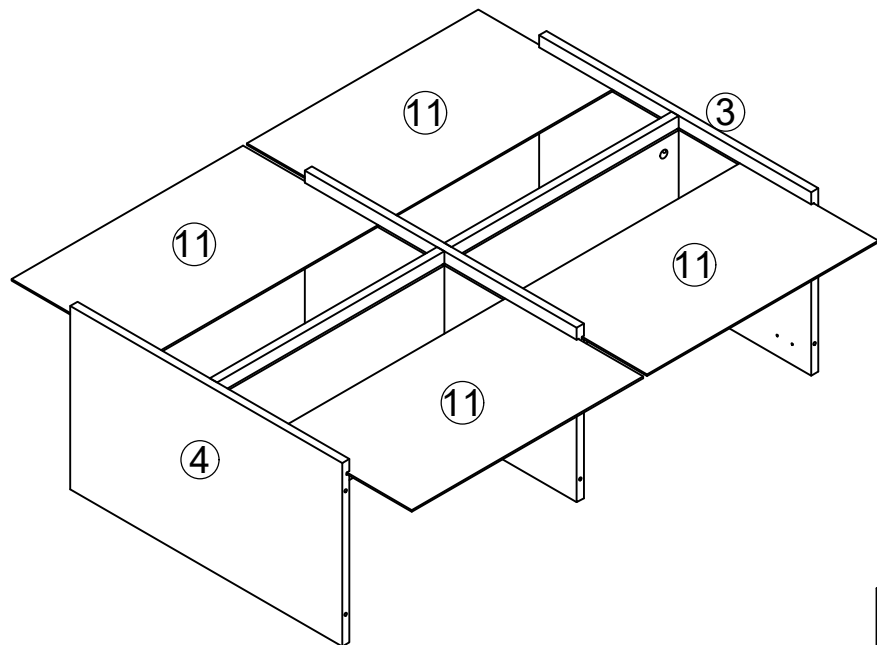

C*6

4

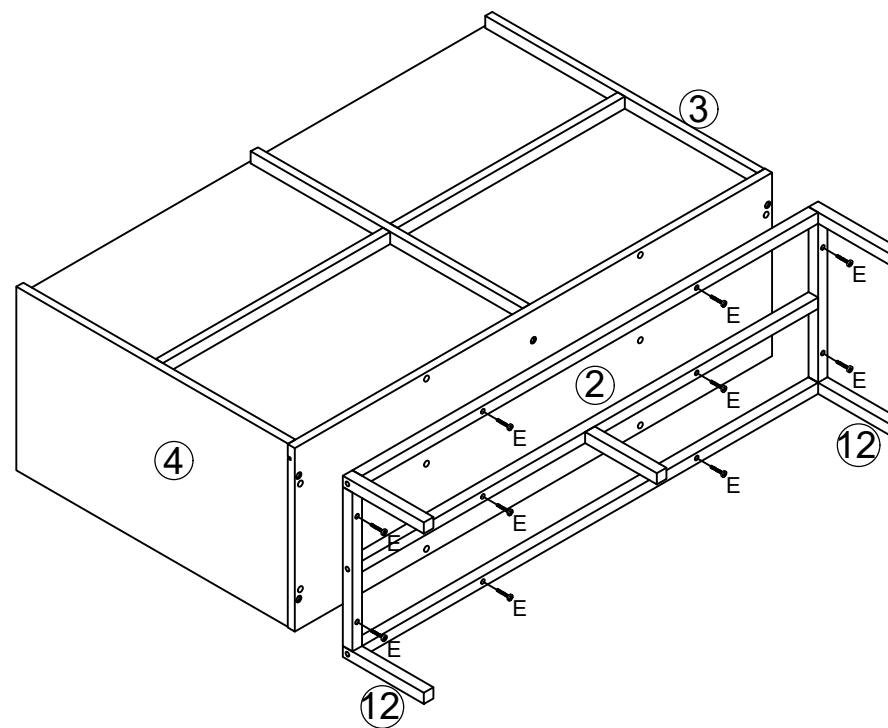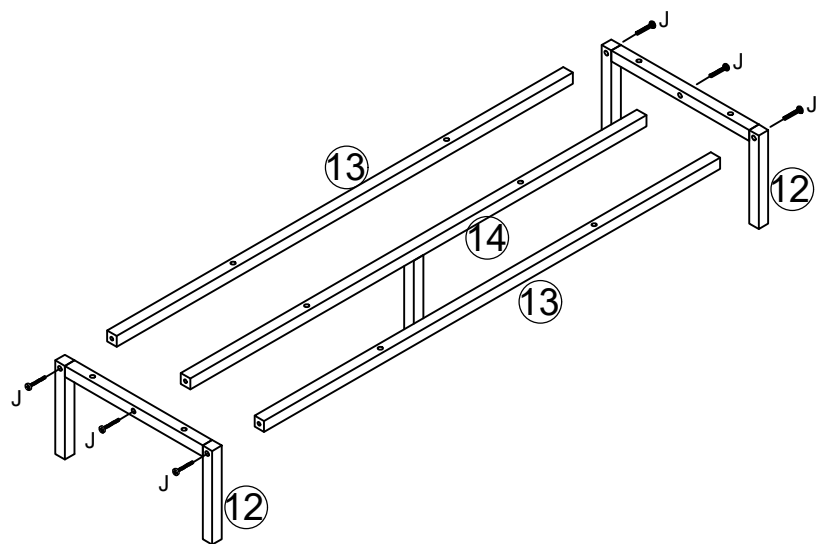


E*10



J*6

5


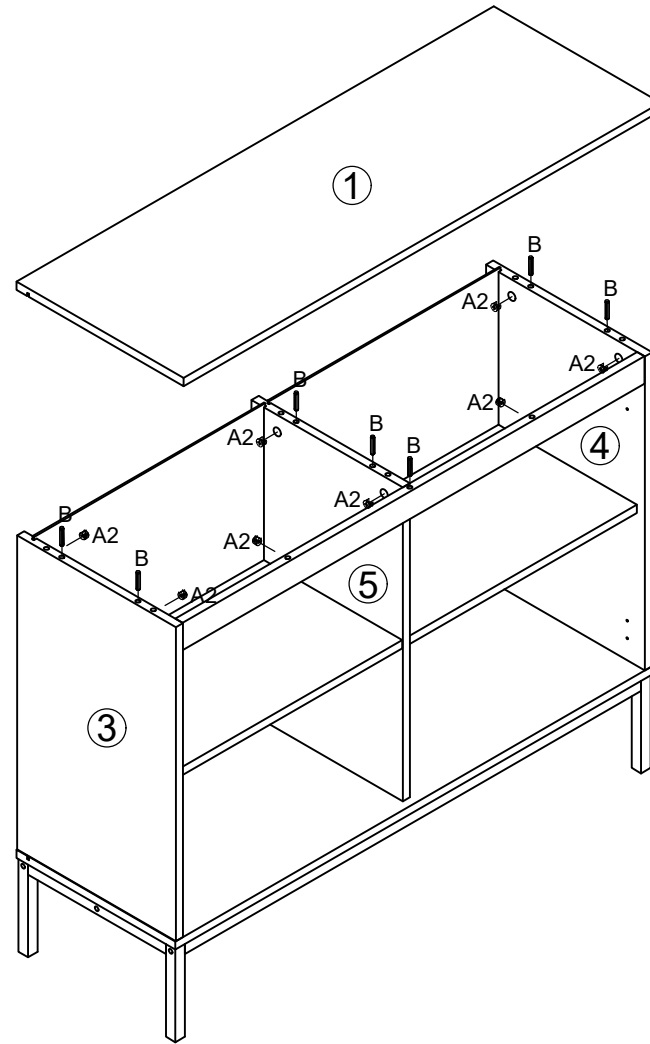


A2*8




B*7

6


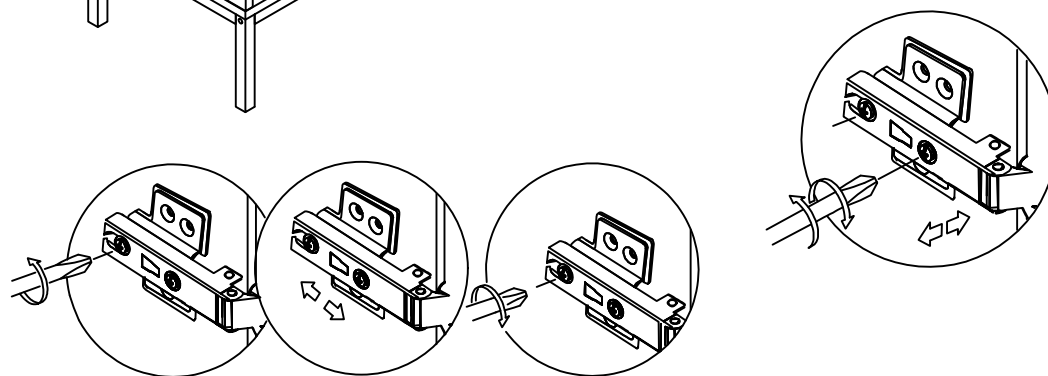
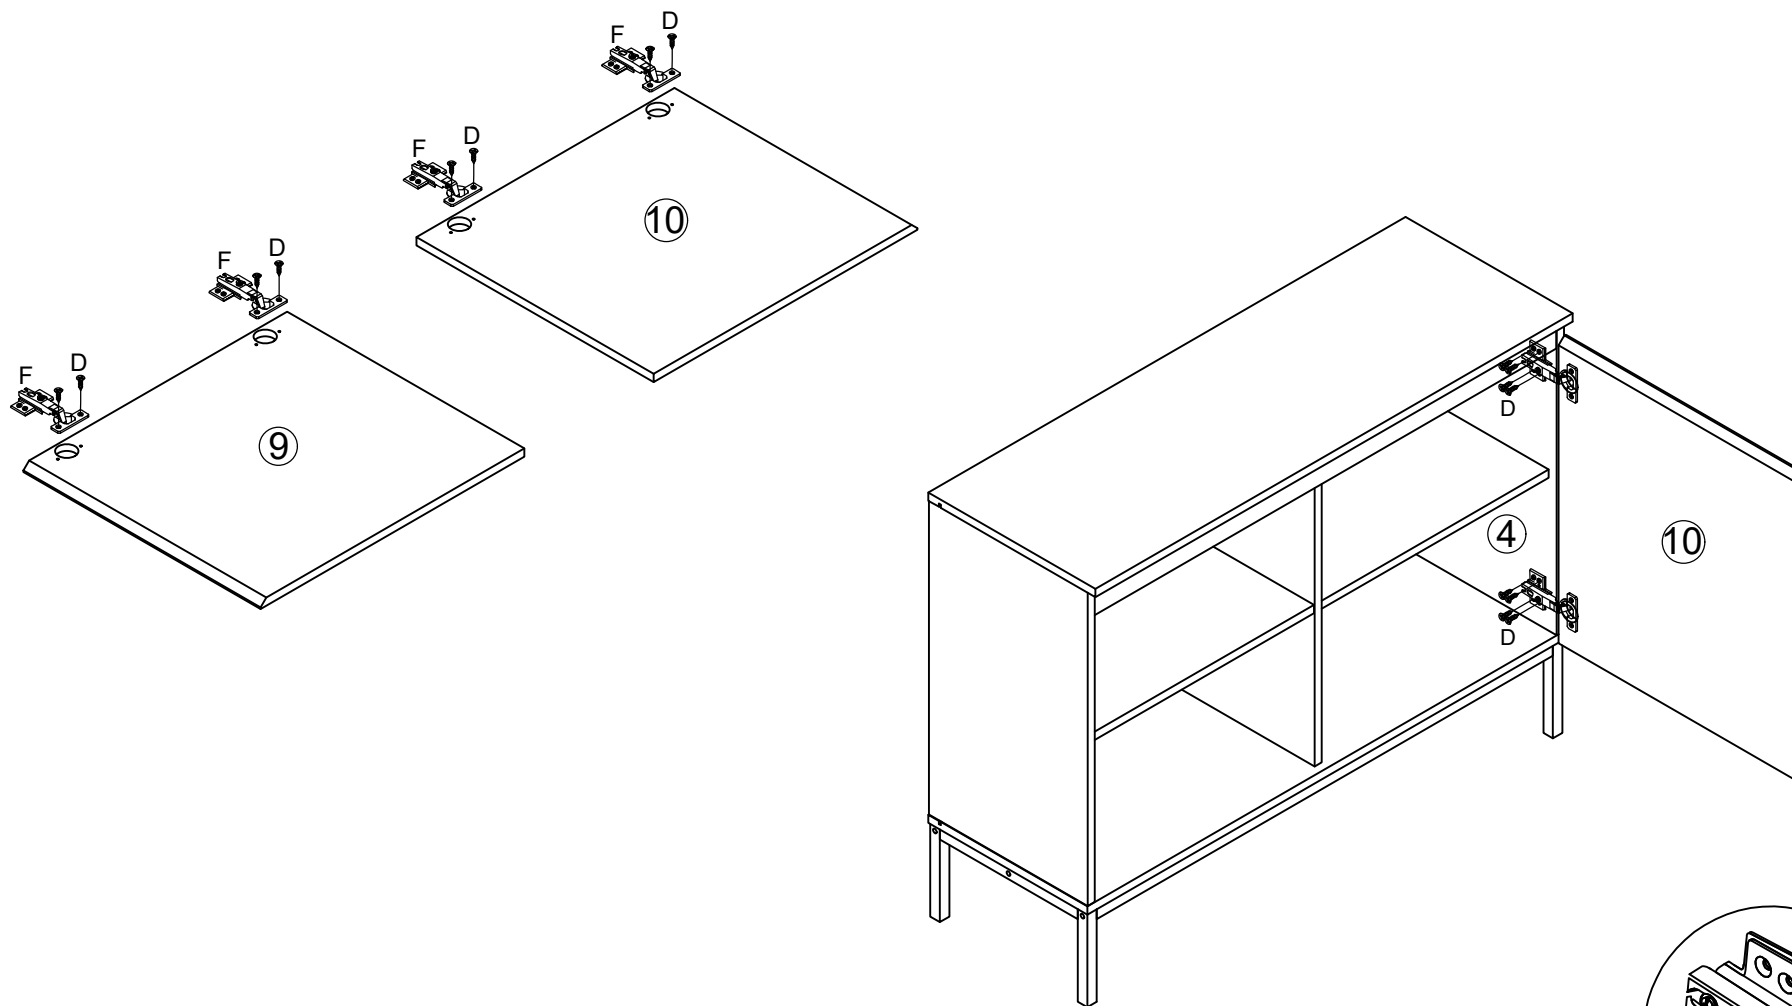


D*16



F*4

7

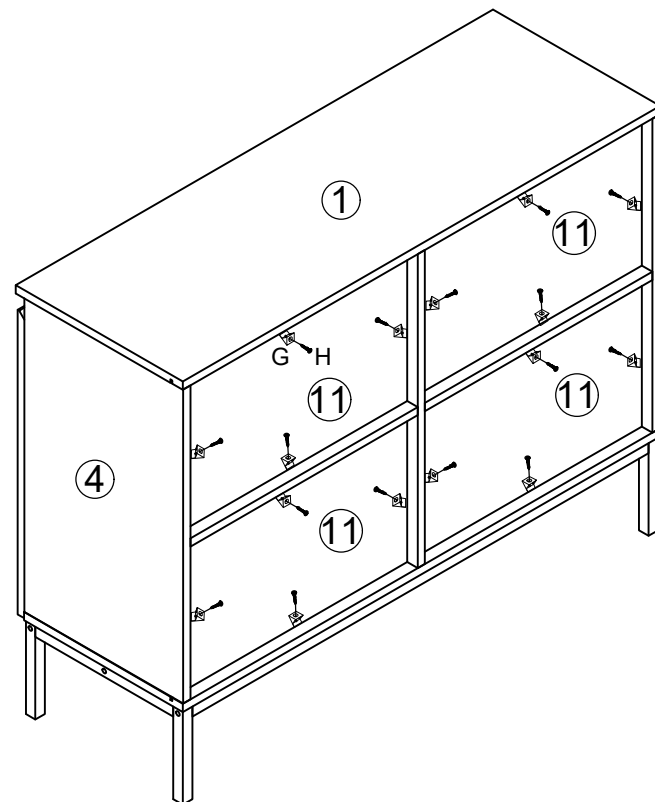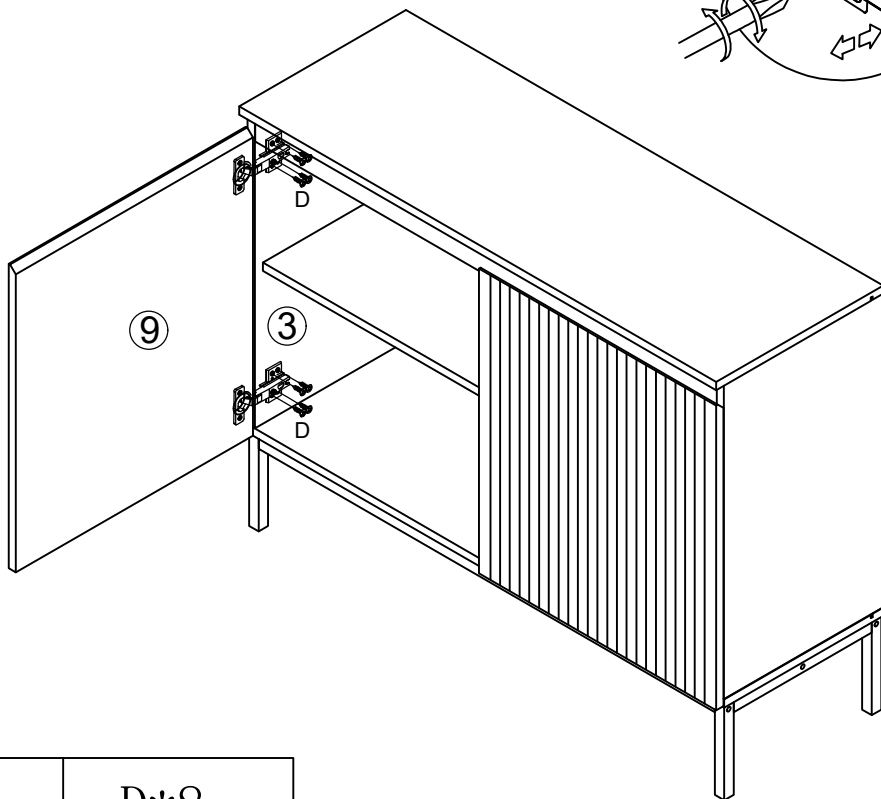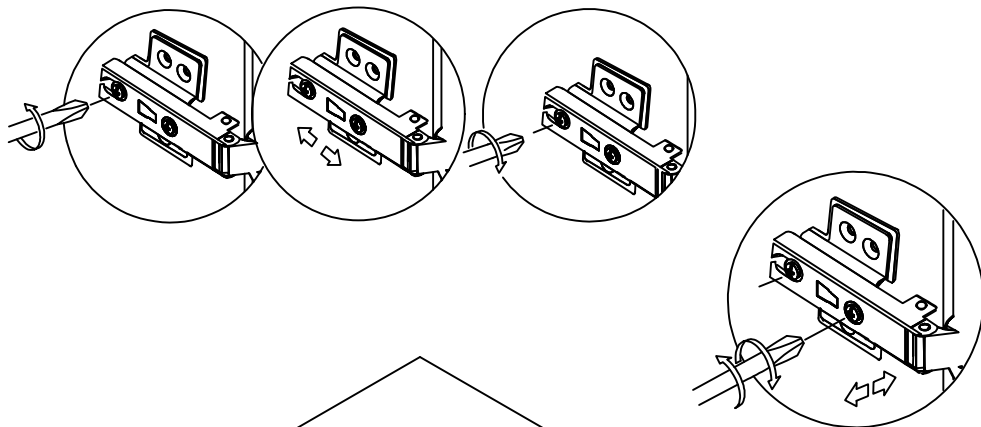

D*8



G*16



H*16

8

(EN) Install the Wall Anchor Mounting Point It's mandatory to anchor it to the wall (either at the top or bottom of the furniture)

(ES) Dispositivo antivuelco. Es obligatorio anclarlo a la pared (en la parte superior o inferior del mueble)

(FR) Il doit être fixé au mur (en haut ou en bas du meuble)


(IT) Dispositivo antiribaltamento. È obbligatorio fissarlo alla parete (nella parte superiore o inferiore del mobile)

(PT) Dispositivo antitombamento. É obrigatório fixá-lo a parede (na parte superior ou inferior do móvel)

(NU) Het is verplicht om het aan de muur te verankeren (aan de boven- of onderkant van het meubel)

(DE) Es ist obligatorisch, es an der Wand zu verankern (am oberen oder unteren Teil des Möbels)

STEP1

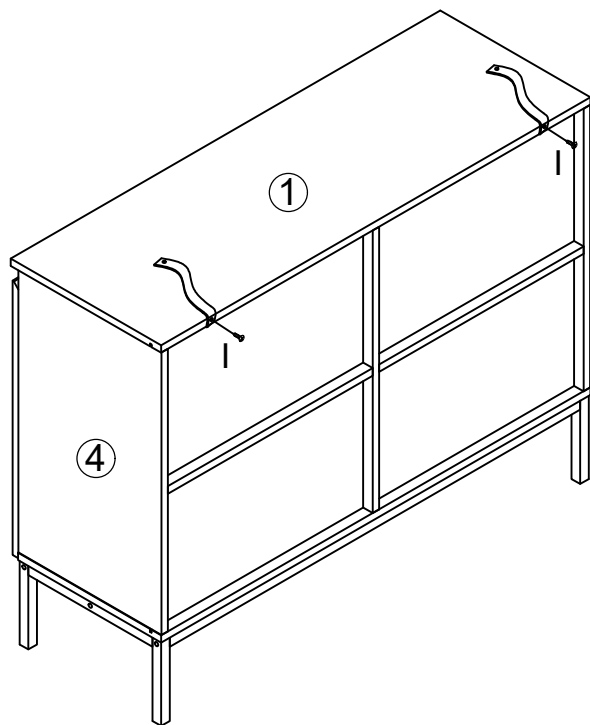

I*2

STEP2

WALL

