




Step 1

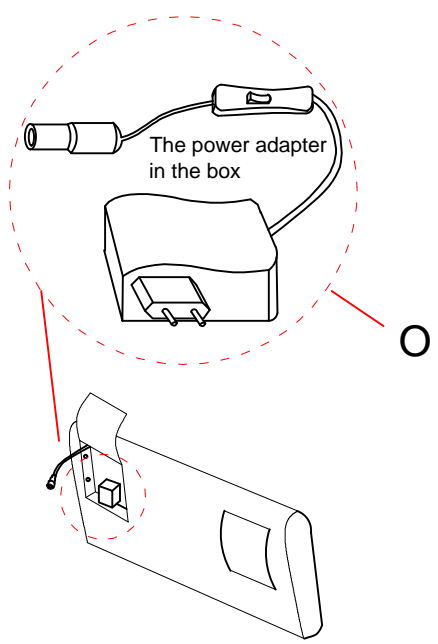


Step 2

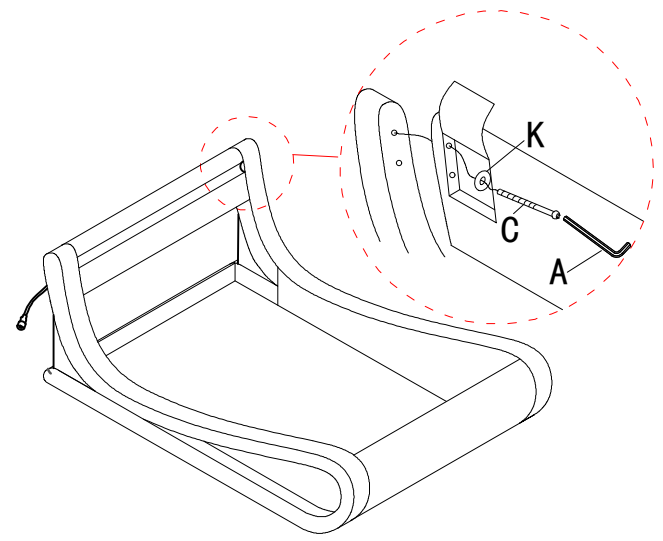


Step 3

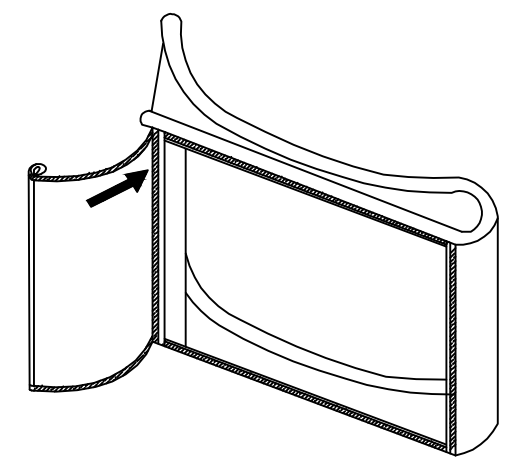


Step 4

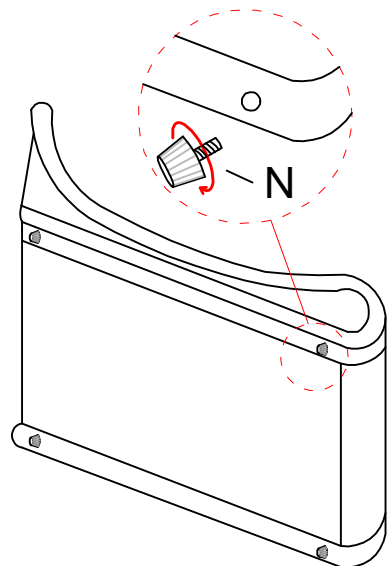






Step 5

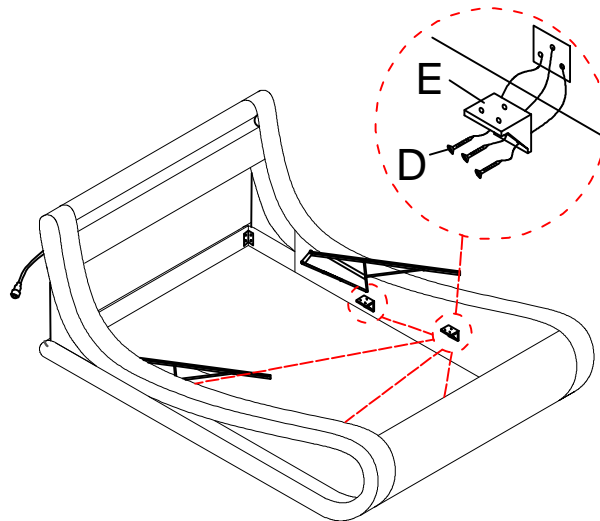


Step 6

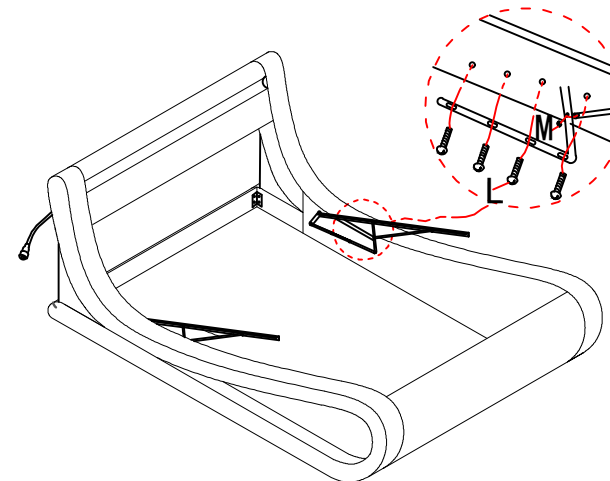

Step 7

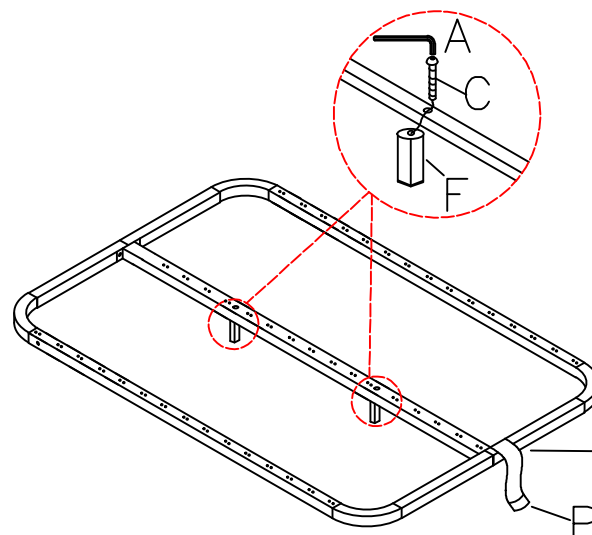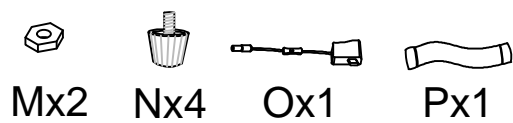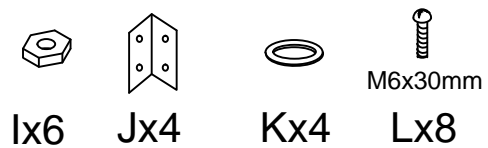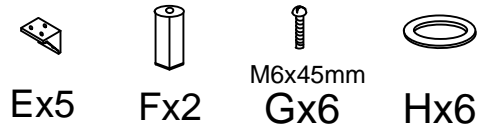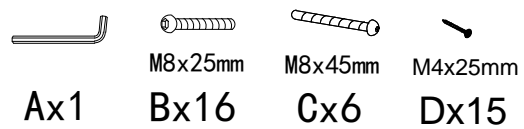


Step 8

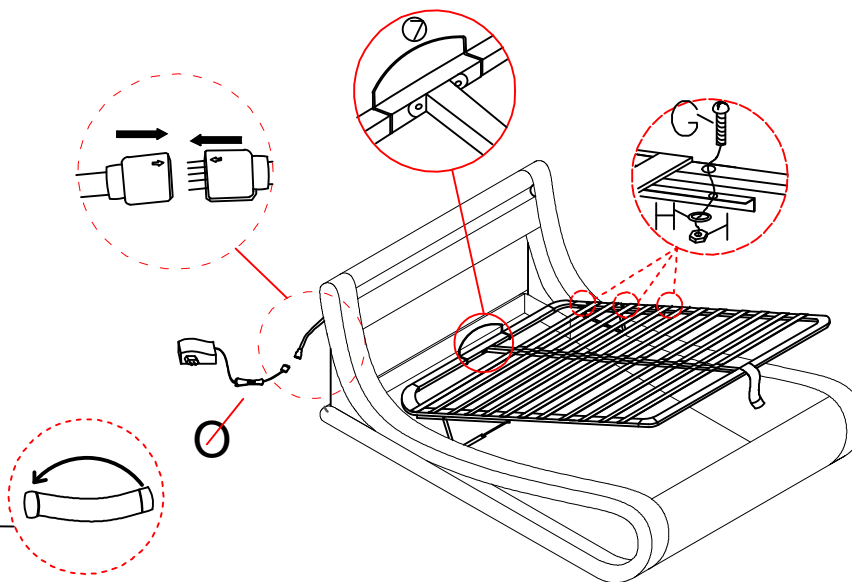



Step 9

150X190cm. 160X190cm. 160X200cm. 180X200cm. 1/3

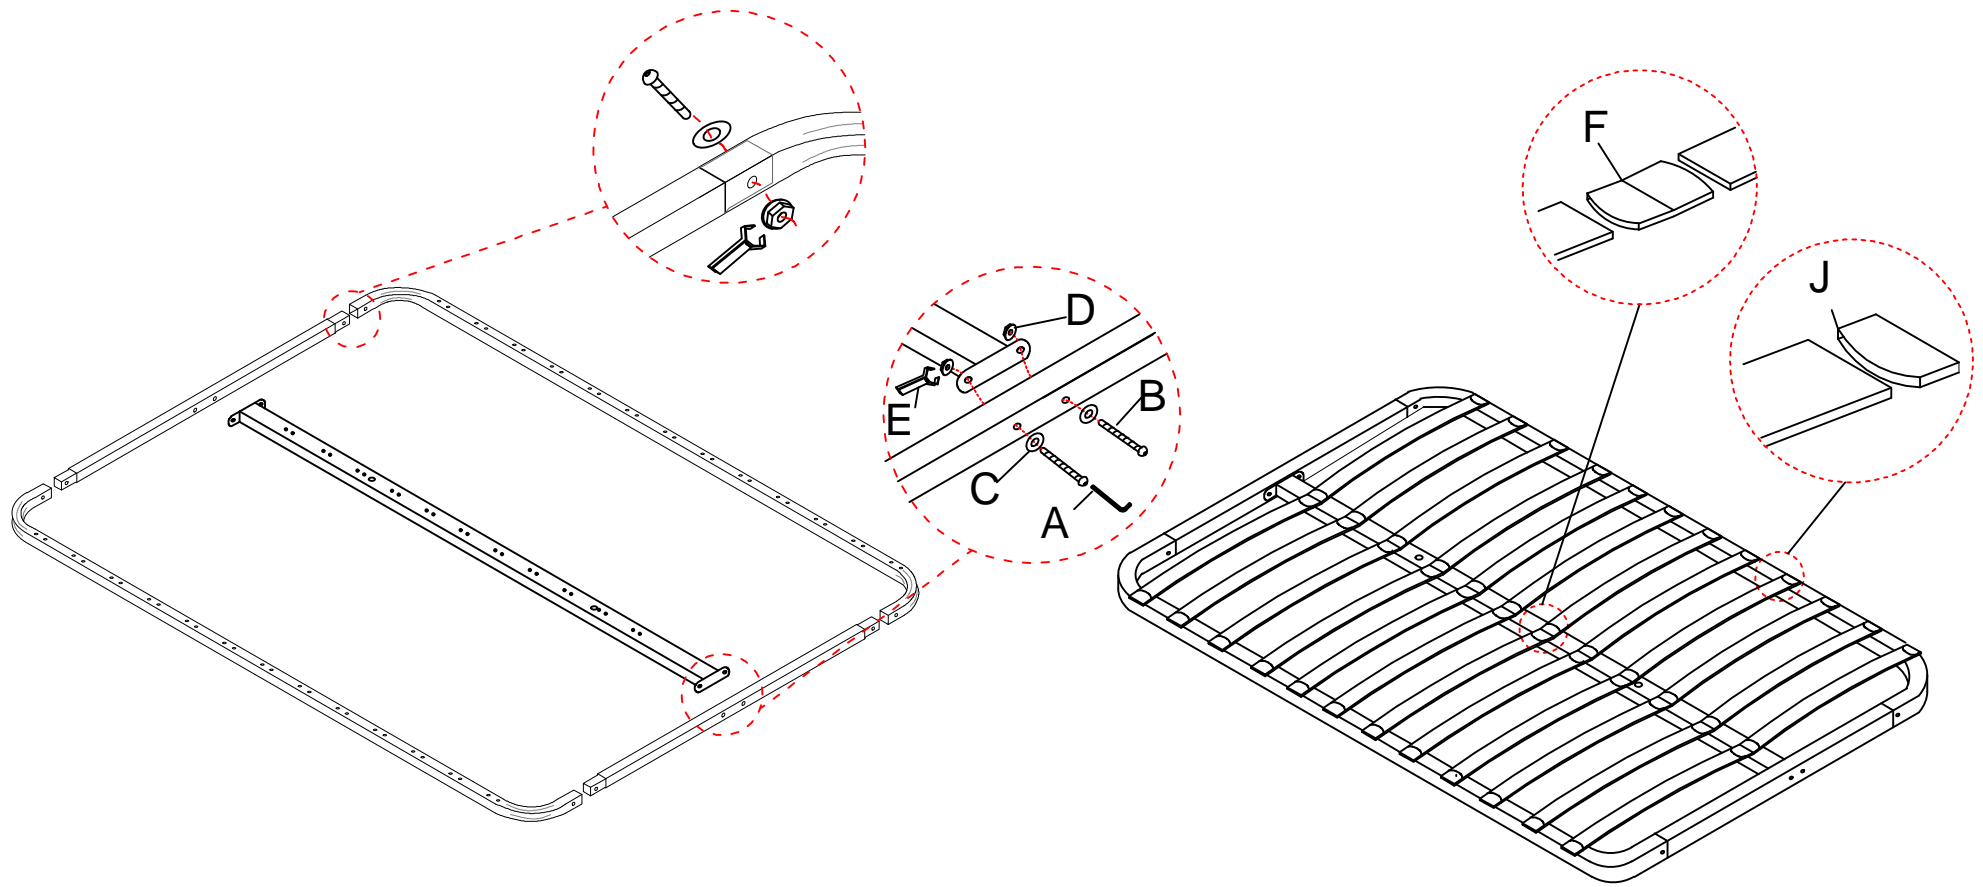


- Ax1 Bx4 Cx4 Dx4 Ex1 Fx12 Jx24
- M8x45mm


150X190cm. 160X190cm. 160X200cm. 180X200cm. 2/3

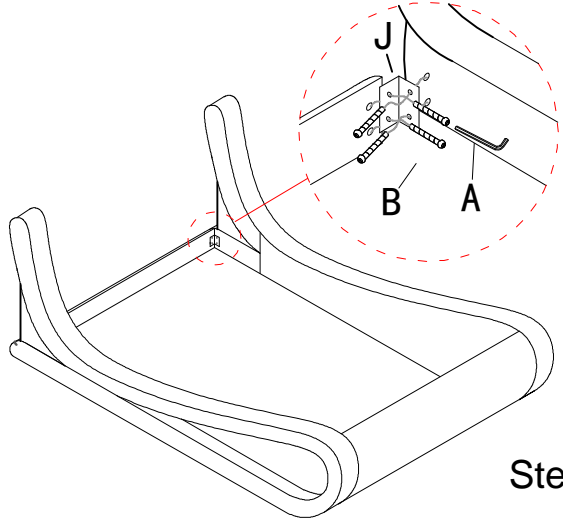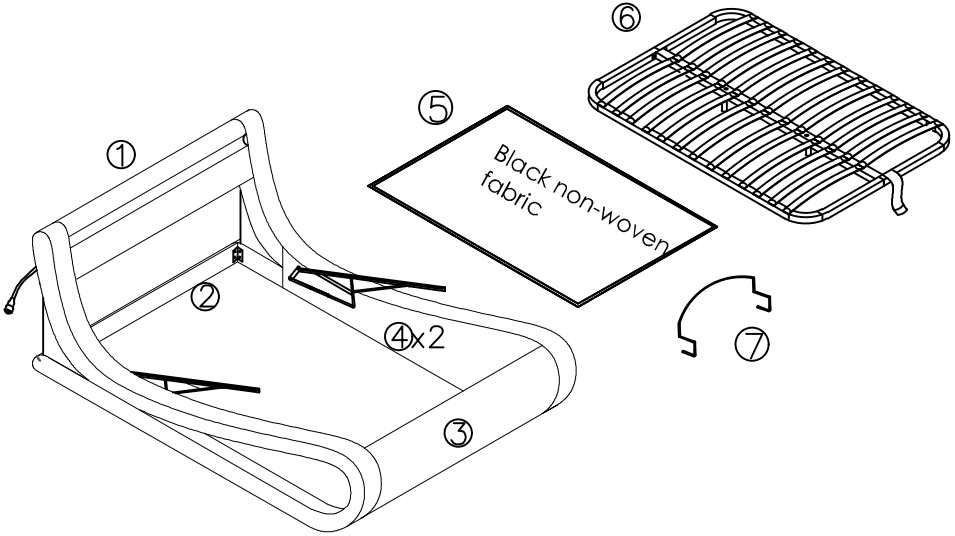


Step 1

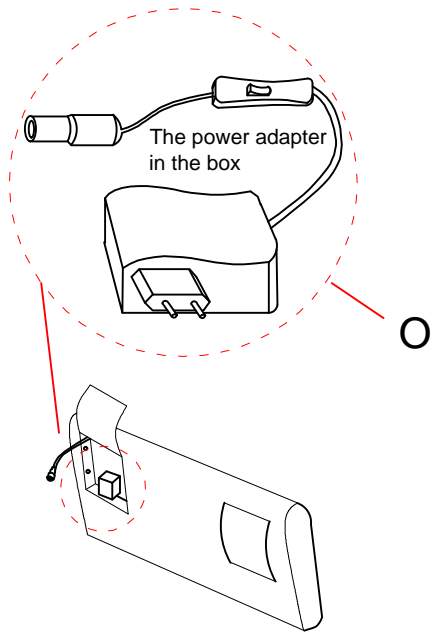


Step 2

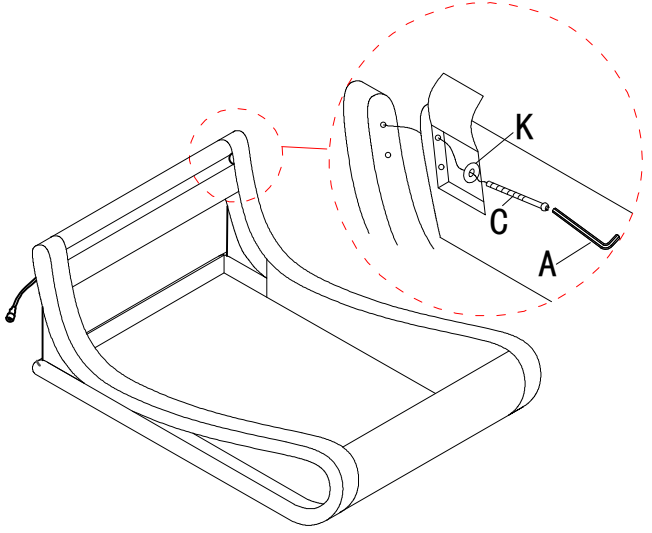


Step 3

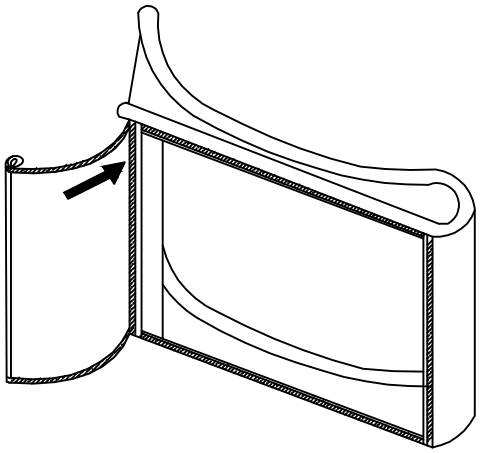


Step 4

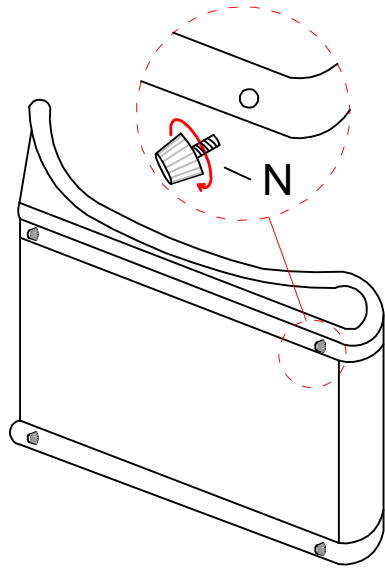






Step 5

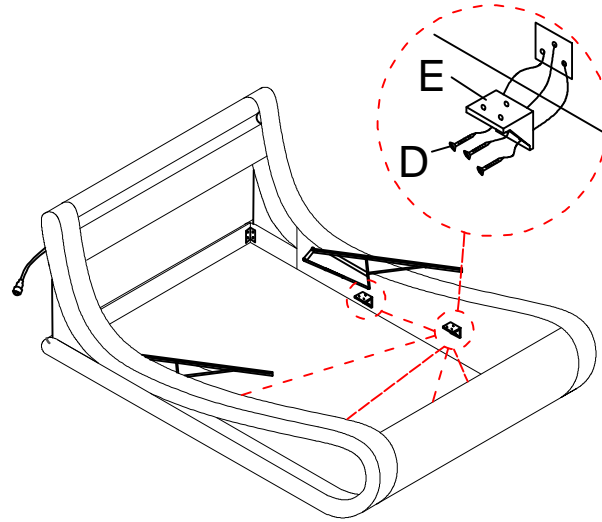


Step 6

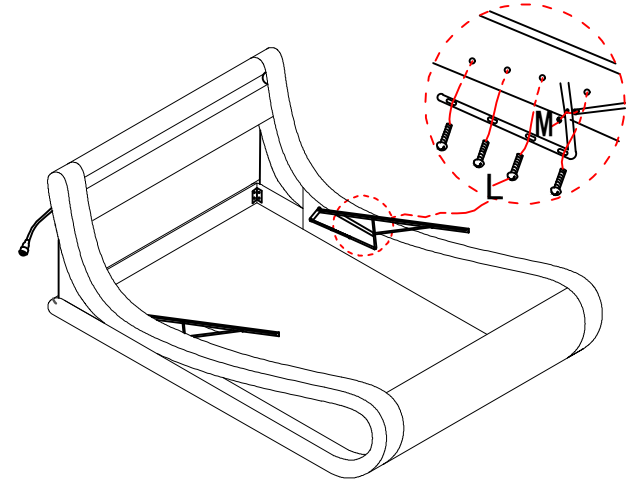

Step 7

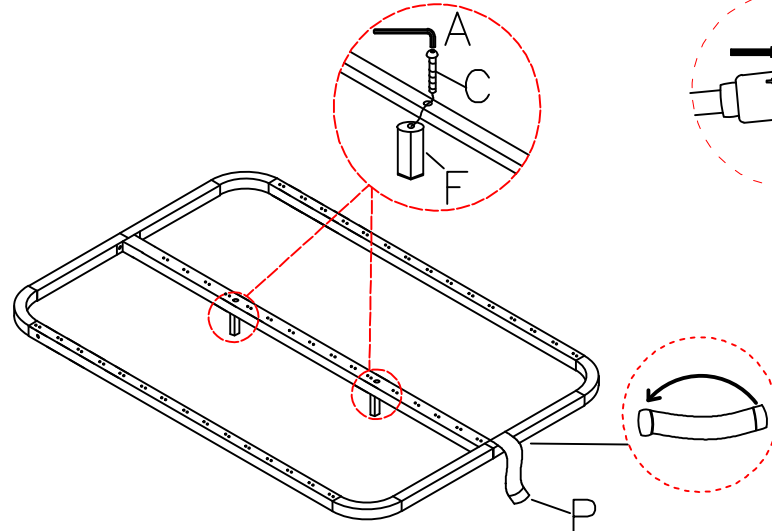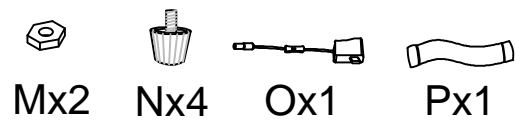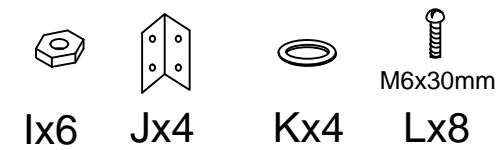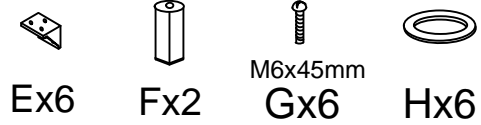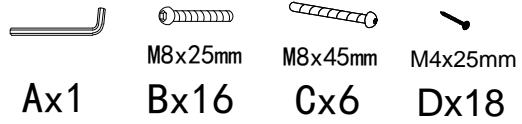

Step 8

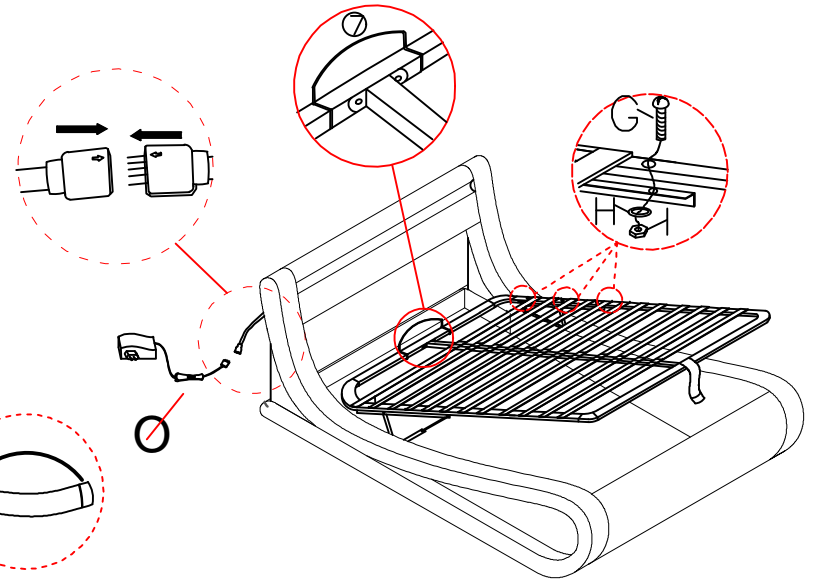

Step 9